



Tonneau Cover Installation

- 1** This product comes assembled. Wash & dry Truck bed.
Read all the instructions. Check the box has:


(1) Bulkhead Foam Seal




(1) Tonneau Cover Assembly & All Components

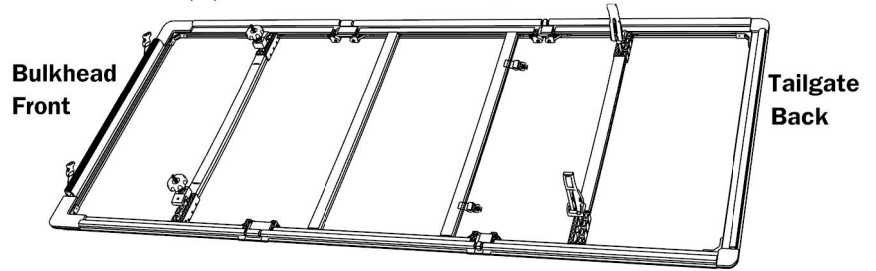


- 2** Install Bulkhead Foam Seal on the front of the box between bedsides and trim to fit.

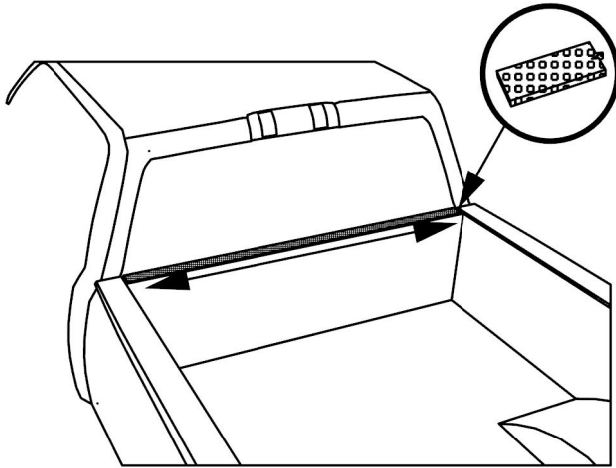


- 3** Place Tonneau Cover Assembly on the top of the truck with the straps facing towards the cab window. Unfold the Tonneau Cover to the tailgate and ensure the Tonneau covers the entire top of the truck and is spaced evenly.

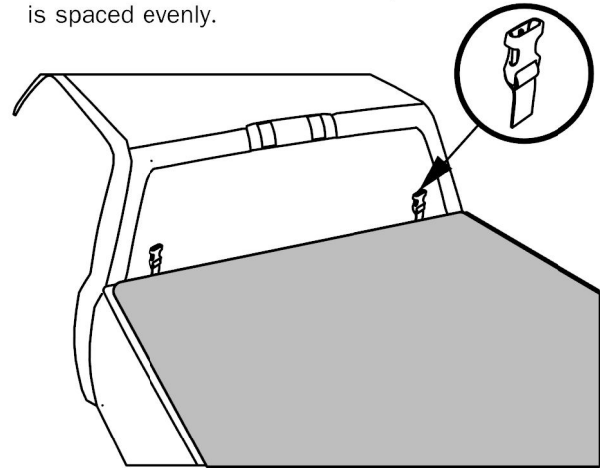

- 4** Tighten the Cab Clamps by securing the clamp hook under the bed rail and turning clockwise. Do not over tighten & ensure the hooks are secure!

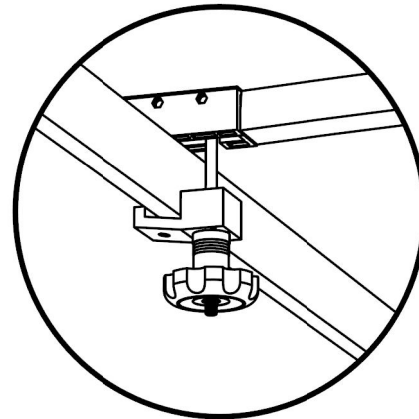


- 5** Tighten the Tailgate Clamps by placing the hook under the bed rail and moving the handle to a vertical position. If the clamp is not secure turn the handle back to a horizontal position and turn it clockwise to tighten or counterclockwise to loosen. Do not over tighten & ensure the hooks are secure!

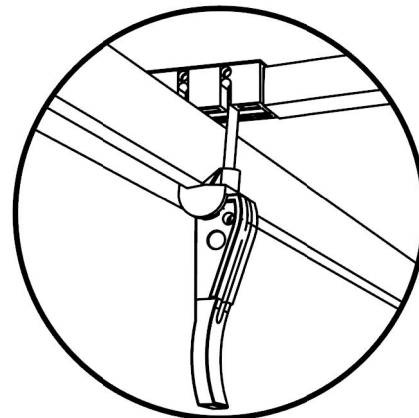

Check clamps are tight routinely

Utility Bracket Installation


- ① Remove all components mounted to the utility rails on the Truck, including the rail caps if equipped.

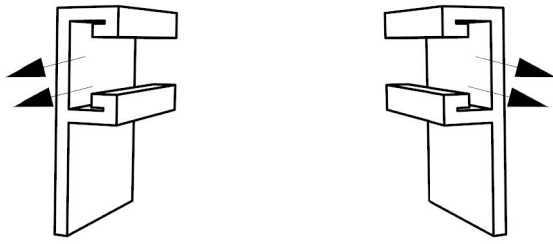


- ② When installing the 4, Utility Brackets make sure the hook is facing downwards.




- ③ Slide 2, Utility Brackets onto the rails and place them near the Bulkhead. Re-install any components removed in Step 1 (except for the rail caps if equipped).

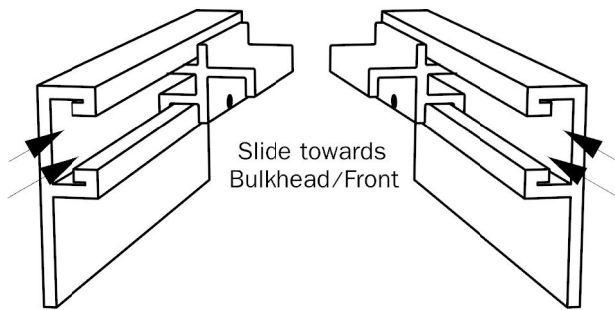


- ④ Slide the last 2, Utility Brackets onto the rails keeping them near the Tailgate (re-install the rail caps if equipped).

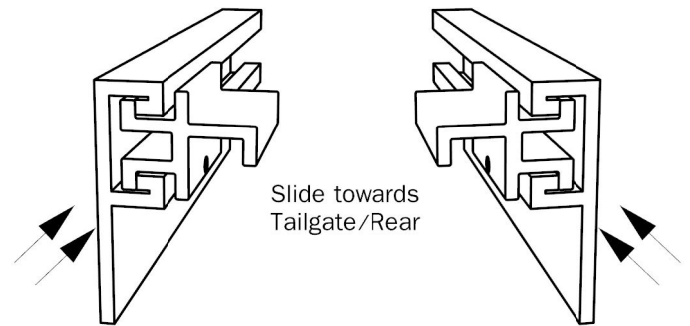


- ⑤ Place Tonneau Cover Assembly on the top of the truck with the straps facing towards the cab window. Unfold the Tonneau Cover to the tailgate and ensure the Tonneau covers the entire top of the truck and is spaced evenly.

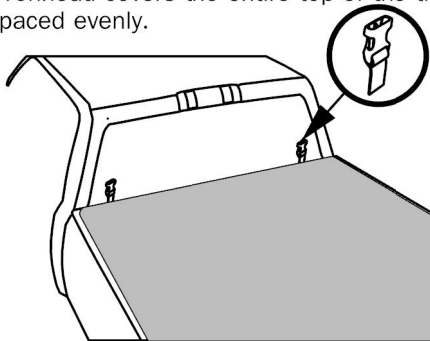

- ⑥ Pull down the Cab & Tailgate Clamps and move the Utility Brackets until the latches line up.

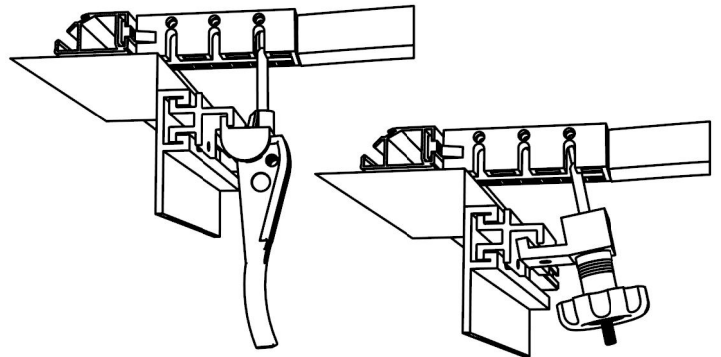

- ⑦ Install the Tonneau Cover Assembly according to the installation instructions using Utility Brackets instead of the truck bed. Once the utility brackets are in the final position tighten the set screws.

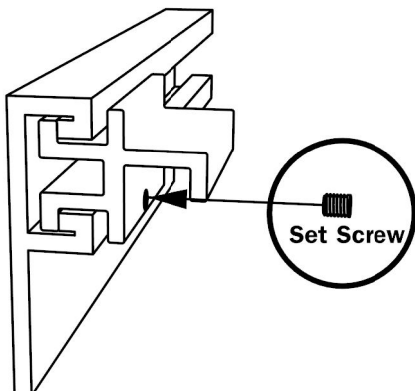

Check set screws are tight routinely